

EARTHQUAKE MODEL 9200

Part #	Description
60G30	CLUTCH DRUM
60G38	SPRING PIN, 7/32" x 1-1/8"
60G56	NUT-Hex, 5/16"-18, two way reversible locknut
407	BOLT-SHCS, 5/16"-18 x 5/8", (handlebar plate to engine)
719	LOCKWASHER-Spring, 3/8"
903E	DECAL, Earthquake
928A	SHOULDER NUT, 5/16"-18
1423	BOLT-HHCS, 5/16"-18 x 2", Grade 5, (auger shock spring)
1433	BOLT-Hex Hd, 3/8"-16 x 1-1/2", (auger to powerhead)
1501	BOLT-Hex Hd, 5/16"-18 x 3/4", Grade 5, Zinc
2104	NUT-Hex, 3/8"-16, Locking
8913	SHAFT, Output, 7/8"
8914	48T GEAR
8915	DOWEL PIN, 1/4" x 1/2", Hardened Steel
9217	7T PINION GEAR
8919	GASKET
8922	BALL BEARING
8923	BALL BEARING
8924	SNAP RING
8929	BOLT-SHCS, 1/4"-20 x 1-1/2" (gear case bottom to gear case top)
8931	BOLT-SHCS, 1/4"-20 x 2" (gear case to handlebar plate)
8939	GEAR CASE, (lower half)
8958	POINT, Earth
8958HD	POINT, Fishtail
8980	EARTH AUGER SPRING, (6"-10" only)
9020	CENTRIFUGAL CLUTCH ROTOR
9020A	CENTRIFUGAL CLUTCH SPRING
9020B	CENTRIFUGAL CLUTCH SHOES
9038	GEAR CASE, (upper half)
9205C	THROTTLE FINGER TIP CONTROL
9205D	THROTTLE CONTROL ROD
9210C	HANDLEBAR-2 Person, w/throttle mounting tab
9211	HANDLE GRIP, 7/8" ID
9214A	10T PINION GEAR
9216	GEAR CLUSTER-48T GEAR & 10T PINION (includes 8924, 8915, 8914, & 9214A)
AV520	GAS ENGINE
EA2F	EARTH AUGER, 2", w/fishtail point
EA3F	EARTH AUGER, 3", w/fishtail point
EA4F	EARTH AUGER, 4", w/fishtail point
EA6F	EARTH AUGER, 6", w/fishtail point
EA8F	EARTH AUGER, 8", w/fishtail point
EA10F	EARTH AUGER, 10", w/fishtail point
EB4	BLADE, Earth, 4"
EB6	BLADE, Earth, 6"
EB8	BLADE, Earth, 8"
EB10	BLADE, Earth, 10"
EBOLT	BOLT, Hex, 1/4"-28 x 5/8", Grade 5, (earth blade to auger)
ENUT	NUT, Nylock, 1/4"-28, (earth blade to auger)
GCA	GAS CAP
GT3HP	GAS TANK
WF516	WASHER-FLAT, 5/16", (auger shock spring)

